











# SkyPhone B5 Quick Operation Manual

2005/06/15

1. **SkyPhone B5 software Installation:** execute \SkyPhone2000-rel-xxx\setup.exe in the CD.
2. **SkyPhone B5 hardware Installation:**
  - Plug in SkyPhone B5 USB Port
  - When a new device is found, system will drives new device automatically
3. **Download Skype and account registration:** Go to [www.skype.com](http://www.skype.com) to get the newest Skype software and follow the instruction to install and to register a free account.
4. When the Skype and SkyPhone2000 start, the system will open the warning windows. Please choose “**Allow this program to use Skype**” and OK.
5. **Audio device selection**
  - The SkyPhone2000 will set audio device of Skype to “**Generic USB Audio Device**” **automatically**.
  - **Attention!** Microsoft Windows usually automatically configure USB Phone (Generic USB Audio Device) as the default audio. Please use Control Panel \ Audio and Multimedia to configure to your original sound card as the “default audio device”. It is recommended to check “Always use default audio”.
6. **Test Drive:** Pick up the phone and push “**Hook**” button. Skype should be popped up. Use keyboard to type in “echo123” and then “Enter”. Follow the voice instruction from the test site to record voice and hear your own voice. Push  button to hang up the phone and Skype window becomes minimized.
7. **Operation**
  - **Outgoing VoIP calls with Skype**
    - ◆ PC-to-PC: Push “**Hook**” button and Skype will be popped up automatically. Push in the speed-dial number of your Skype contact, followed by  button. The call will be sent out. Alternatively, use mouse to double click a Skype Contact.
    - ◆ PC-to-Phone (SkypeOut Service)
      - Buy pre-paid card from Skype
        - Go to “Tools \ Go to my account page”. Sign in with your Skype account.
        - Use credit card to buy SkypeOut pre-paid card.
      - Call out with SkypeOut “00 + Country code + Local Number ” followed by  button
        - Fixed line in Taiwan: 00-886-2-2004-0000
        - Mobile phone in Taiwan: 00-886-935-123-456
        - China: 00-86- -...
        - USA: 00-1- ...
  - **Skype VoIP incoming call:** Simply Push  button to accept Skype call and push  button to reject or to hang-up the call.

# SkyPhone B5 簡易安裝說明

2005/06/15

1. SkyPhone B5 應用程式安裝程序: 執行光碟上 \SkyPhone2000-rel-xxxx\Setup.exe,選擇 Yes 完成安裝
2. SkyPhone B5 硬體安裝程序
  - 一、 插上 USB Port
  - 二、 找到新硬體後,系統會自動驅動裝置
3. 安裝 skype: 上網 [www.skype.com](http://www.skype.com) 或 [www.pchome.com.tw](http://www.pchome.com.tw) 下載最新軟體並申請帳號及安裝 Skype
4. 當 Skype 和 SkyPhone2000 開啓時,會出現一個警告視窗,請選擇 ” **開放此程式使用 Skype** “,並確認.
5. 設定音效裝置
  - SkyPhone2000 將會自動設定 Skype 的音效裝置為“**Generic USB Audio Device**”
  - 注意: 微軟 Windows 會自動將 USB Phone 設為預設音效裝置(Generic USB Audio Device),要繼續用原音效卡聽 MP3 的話,請到 控制台 / 聲音及多媒體 / 音訊 / 音效播放及音效錄音 設定回原音效卡,並勾選”只使用慣用裝置”
6. 確定安裝完成,試音:
  - 一、 執行 skype.exe
  - 二、 拿起話筒,按” **Hook**” 鍵,此時 Skype 畫面即出現
  - 三、 在 Skype 視窗,以鍵盤鍵入” echo123” 並按” Enter” ,撥至 Skype 提供的測試點
  - 四、 在嗶聲後留話,幾秒後聽到自己留言
  - 五、 按話筒的  鍵掛斷,Skype 畫面消失
7. 操作說明
  - 一、 以 Skype 撥出
    1. PC-to-PC: 拿起話筒,按” **Hook**” 鍵,Skype 會自動帶出,使用下列二種方法皆可撥出
      - a. 用滑鼠雙點聯絡人
      - b. 按話筒上的聯絡人速撥鍵碼 0~99 (在 Skype 內設定),再按話筒上的  鍵
    2. PC-to-Phone (SkypeOut 服務)
      - a. 先上網買預付卡: 點選
        - 甲、 功能 \ 連結到我的小額付款帳號, Sign In
        - 乙、 輸入信用卡號買點數
      - b. 撥出: “00 + 國碼 + 地區碼 ”,再按  鍵確定撥出
        - 甲、 台灣固定電話: 00-886-2-2004-0000
        - 乙、 台灣行動電話: 00-886-935-123-456
        - 丙、 大陸: 00-86- ....
        - 丁、 美國: 00-1- ...
  - 二、 Skype 來電時: 按  鍵即可接通,按  鍵掛斷